



## Procure Software® v10

# Keyless Entry System (KES)

---

### ***Hardware & Wiring Setup***

Begin by setting up the keypad, relay box and wiring. This involves electrical connections and should be installed by a qualified technician.

- See page 3

### ***Install Drivers for USB / Serial Adapter***

IMPORTANT! Before connecting the relay box to your computer YOU MUST install the drivers needed for the USB / serial adapter.

- See page 5

### ***Using the Keyless Entry Software***

Learn how to install and use the software for transmitting and managing codes for the Keyless Entry System.

- See page 7

### ***Need Help?***

For assistance contact Procure Technical Support.

Web: [procaresupport.com](http://procaresupport.com)  
Email: [tech@procaresoftware.com](mailto:tech@procaresoftware.com)  
Phone: 1 (800) 964-1729

This page intentionally left blank.

# Procare Software®

See reverse side for Wiring Diagram and  
Product Specifications  
**Installation Instructions**

## KEYLESS ENTRY SYSTEM

Before you begin...

Connecting the Keyless Entry System (KES) is not complicated; however, unless you are experienced in doing so, electrical connections should be made by a qualified technician. This unit is not intended for after hours security. A dead bolt or similar device will be needed when the building is closed.

Each KES is shipped with the following components. Verify that your box contains:

- a.) Keypad with short attached cable, cable coupler, and long (8 wire) cable with RJ45 connectors.
- b.) Relay Box
- c.) Chime (Doorbell) Kit with doorbell, transformer and two (2) manual override buttons,
- d.) Wire with RJ11 connectors e.) RJ11 to Serial Adapter f.) Serial to USB Adapter & USBgear mini CD
- g.) Procare CD and Getting Started Guide


Please set up and test these components on a table top prior to mounting them in their final locations.

Mounting the components (order is not important).

- 1 Mount the keypad in the desired location. Be sure to allow a cable feed-through hole. The keypad should be in a location (indoors or out) that does not receive direct sun or rain. Attach the short cable on the keypad to the cable coupler then to the long RJ45 cable (supplied) or substitute your own straight through CAT-5 network cable.
- 2 Mount the relay box in a protected indoor location, such as the attic of the building. Again, keep in mind the RJ11 cable (provided) will need to reach from the relay box to the computer.
- 3 Mount the doorbell transformer in a protected indoor location. Make sure a standard 110V power outlet is within reach of the transformer.
- 4 Mount the doorbell in an audible, central, location.
- 5 Mount the door strike or magnetic lock unit per the manufacturer's instructions.
- 6 Mount the manual override button(s) in the desired location(s).

Making the electrical connections (If you have not already done so, TURN OFF ELECTRICITY).

- 7 Connect the long RJ45 cable coming from the keypad to the Relay Box terminal marked "Keypad."
- 8 Connect a 110V power supply to the doorbell transformer.
- 9 Using 20-2 gauge wire, connect the doorbell transformer to the relay box using the terminal marked "Transformer."
- 10 Using 20-3 gauge wire, connect the doorbell to the relay box using the terminal marked "Doorbell."
- 11 Using 20-2 gauge wire, connect the door strike and manual override buttons (if desired) to the relay box using the terminal marked "Door Control Circuit".
- 12 See previous page for details. Install driver from the USBGear mini CD. Then connect USB-Serial adapter to computer's USB port. (Serial-RJ11 adapter should already be attached).
- 13 Connect RJ11 cable to relay box terminal marked "Computer Serial Port." Attach other end of cable to RJ11 adapter at computer. You must install USB drivers before connecting to your computer. See page 5.

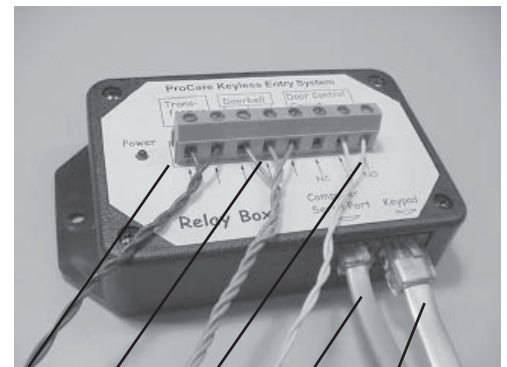


# Product Specifications



- Power required:** 12-16 volts DC (or AC) @ 100ma supplied by attendant 16VAC doorbell transformer. Power is applied to terminal strip on relay box.  
 Door strike requires separate power supply (by user).
- Keypad/Wall frame unit:** Display – 2 LEDs, “Ready” (red) and “Accept” (green)  
 Environment – Indoor and sheltered outdoor,  
 Dimensions – length 7.4”, width 4.1”, height 2.43” (including wall frame)  
 Keypad case material – black ABS  
 Wall frame material – .075” black anodized aluminum  
 Weight – 14.7 oz.
- Relay Box:** Provides interfaces to power transformer, computer, keypad, doorstrike and doorbell.  
 Display – 1 LED “power” (red)  
 Environment – Indoor use only.  
 3 Relays rated at 10 amp. Actual current used: approx 0.1 amp.  
 Dimensions – length 5.1” (incl mounting flanges), width 2.8”, height 1.6”  
 Case material – black ABS  
 Weight – 5.5 oz.
- RS232 port:** RJ11 jack. Standard modular phone type cable to PC serial port, fitted with RJ11 to DB9 serial converter and serial to USB adapter.  
 Hardware handshake is continually jumper wired to “on” within the converter.  
 Data rate is set to 9600bps

## Wiring Diagram

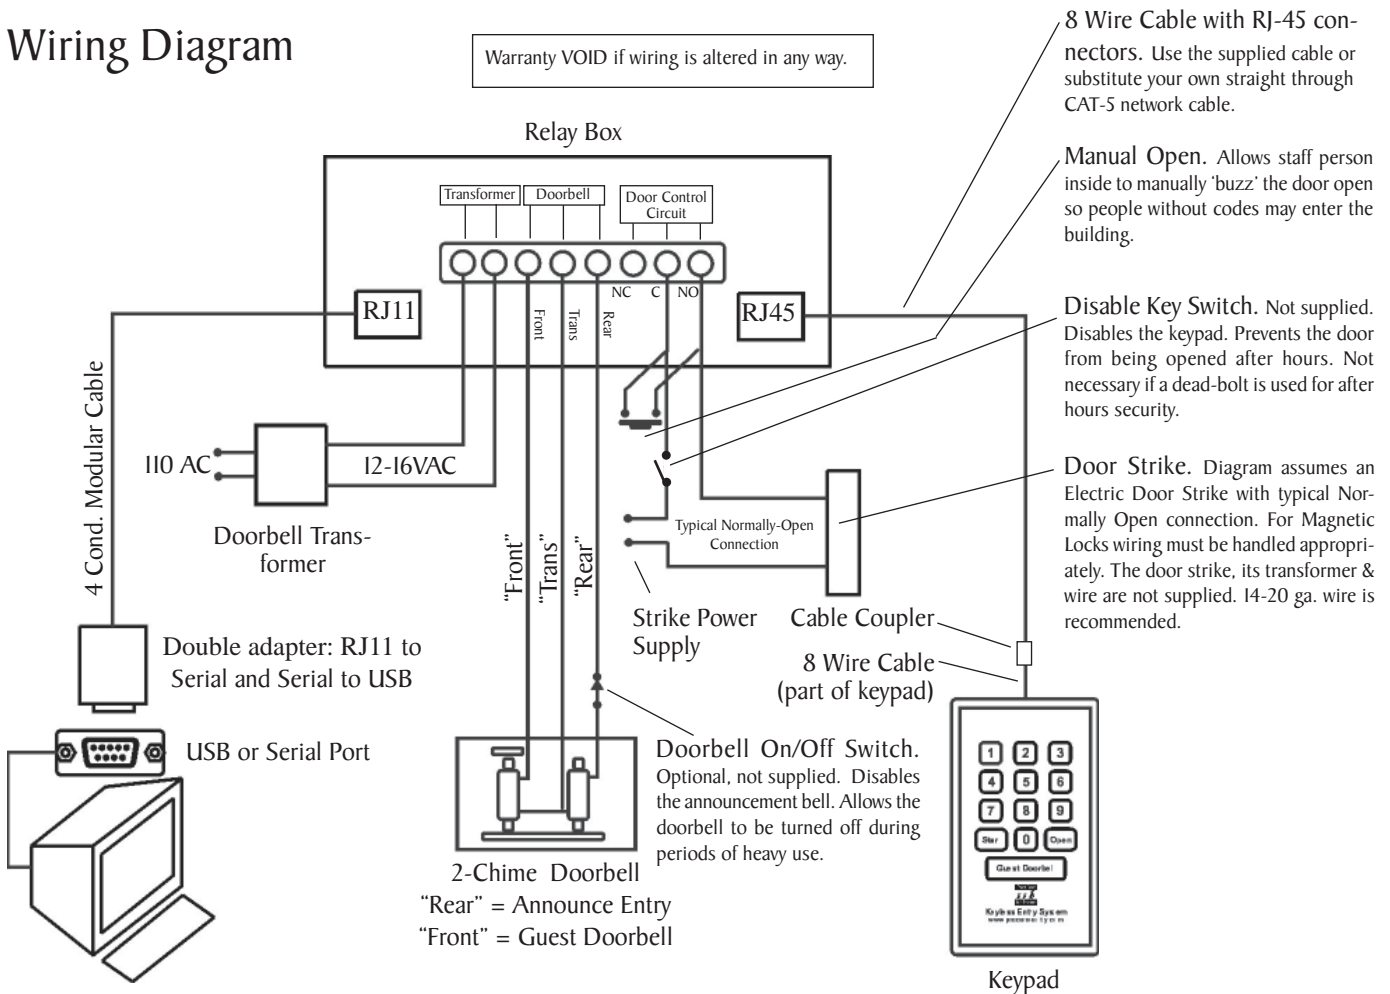

## **\*\*Important\*\***

# **YOU MUST INSTALL DRIVERS – BEFORE CONNECTING the USB / Serial Adapter to your computer**

### ***Why does the Keyless Entry need an Adapter?***

USB devices are limited to a cable length of 10-15 feet. The Keyless Entry uses a serial connection so your computer can be farther away from the Relay Box. Using a USB / Serial adapter allows you to connect to a USB port on your computer. If your computer has a serial port, then it is not necessary to use an adapter.

### ***How does the Adapter connect to the Keyless Entry Hardware?***

The cable with RJ-11 ends, which comes from the Relay Box, connects to the gray RJ-11 adapter which in turn connects to a blue USB adapter (Figure 2).

### ***Can I connect to a Procure Touch Computer?***

This is not recommended. Since assigning and transmitting ID codes to the Keyless Entry is done through the main part of Procure, not through the check-in screen, it's best to connect to a standard desktop computer. If your situation requires connection to a Procure Touch, a special adapter is needed. Search for article [KB0193](#) at ProcureSupport.com.

### ***Install Driver First, then Connect Adapter to Computer***

You MUST install the driver BEFORE you connect the adapter to your computer.

**For Windows 7:** Download and install the latest driver from the USB Gear web site. Go to ProcureSupport.com and search for article # KB0250 which contains a link. Once the driver is installed continue with step 3 below.

**For Windows Vista, XP, 2003 or 2000:** Use the mini CD (included) and follow these steps.

1. Log on to your computer as a local Administrator and insert the USBGear mini CD.

If the CD does not start on its own then *Open "My Computer"* and *Dbl-click* the CD drive (should say "USBGear") then *Dbl-click* the file named *Start* (or *Start.html*).

2. Under "Driver Installation" click *Windows Vista, 2003, XP, 2000 Driver*. If you have a choice between Save and Run choose Run. Installation takes just a few seconds. When it is complete you may need to tap Enter on your keyboard to close the window.
3. Plug the blue adapter into a USB Port on your computer. The blue adapter should have come pre-attached to a gray colored RJ-11 adapter (Figure 2).

Optional: If needed, attach the silver USB extension cable to the blue adapter and plug the extension cable into your computer (Figure 3).



**Figure 1**  
USB Adapter Only

**Figure 2**  
USB Adapter connected to  
RJ-11 Adapter

**Figure 3**  
Optional silver extension  
cable connected to USB  
adapter

## ***Software Warranty***

Procare Software warrants that, for a period of ninety (90) days from the date of delivery to you, as evidenced by the date on your invoice, the media on which the program is furnished under normal use will be free from defects in materials and workmanship and the program under normal use will function without significant errors that make it unusable. If you notify Procare Software within the warranty period of any such defects, the media will be replaced.

The sole remedy for breach of this warranty is limited to replacement of defective materials and does not include any other kinds of damages. Procare does not issue refunds on software.

The entire risk as to the performance of the programs is with the purchaser. Procare Software does not warrant that the operation of the programs will be uninterrupted or error-free. Procare Software assumes no responsibility or liability of any kind for errors in the program or documentation or for the consequences of any such errors. In no event will Procare Software be liable for any damages, including loss of data, lost profits, or other special, incidental, consequential or indirect damages from the use of the program or accompanying documentation, however caused and on any theory of liability. You acknowledge that the license fee reflects this allocation of risk.

## ***Hardware Warranty***

Hardware directly from Procare Software carries a one (1) year warranty against defects in materials or workmanship from the date of delivery, as evidenced by the date on your invoice. Warranty is for repair or replacement only. Procare does not issue refunds on hardware. Warranties do not cover cosmetic damage or damage by weather, negligence, misuse or accident, or repair or modification by unauthorized persons.

**ATTENTION:  
Warranty VOID if wiring is altered in any way.**

Hardware from one of our distributors is warranted for the length of time offered by the distributor. Any warranty issues related to this hardware must be handled directly with the distributor.

Note: Terms of the above warranties are subject to change without notice.

## Using the Keyless Entry System (KES) Software Instructions

### Before You Begin

Software for the Keyless Entry System (KES) must be installed and run from a computer as follows:

- The computer must be connected to a cable from the relay box by following the wiring installation instructions.
- The computer must have Procure version 10.2.4000 or higher. To make sure you are on the latest version, begin at your *Procure Home* screen and click *Utilities > Check for Online Update*.

### Installation

#### Download:

1. Log on to your computer with local administrator privileges and close all programs.
2. Go to [procaresoftware.com/extras](http://procaresoftware.com/extras)
3. Click the link to download the Keyless Entry Software and choose *Run* (Internet Explorer) then follow the on screen prompts to complete the installation.

Note: If you use Firefox choose *Save File* then, once the download is complete, dbl-click the file named *kes\_setup.exe* on your Firefox *Downloads* list to install it.

#### Install from CD:

As an alternative the KES software may be installed from a current Procure CD.

1. Log on to your computer with local administrator privileges and close all programs.
2. Insert the Procure CD.
3. Open the folder on the CD named *Hardware* then open another folder named *KES*. To do so, go to *Start > Computer* (or *My Computer*) > *Procure* (your CD drive) > *Hardware* > *KES*.
4. Double-click *kes\_setup* (or *kes\_setup.exe*) in that folder and follow the on screen prompts.

### Enable the Keyless Entry & Set Options

1. Once the software is installed log in to Procure. From the *Procure Home* screen go to *Utilities > Procure Extras > Keyless Entry System*.

2. At the *Keyless Entry* screen check the *Enable KES* box.


Enable KES

3. Click the *Options* button and choose the following settings:

- a. **Number of Digits in Entry Code** (optional): By default, the codes you assign to people will be 4 digits - which allows for 10,000 possible combinations. If you wish to change this (to 3, 5, or 6 digits) it's best to do so is right away, before you have assigned codes to anyone.



- To make a change click in the white box (right side) and type the phrase "*I am sure*" (without quotes). This will enable the settings.
- Select the number of digits to use for each code.

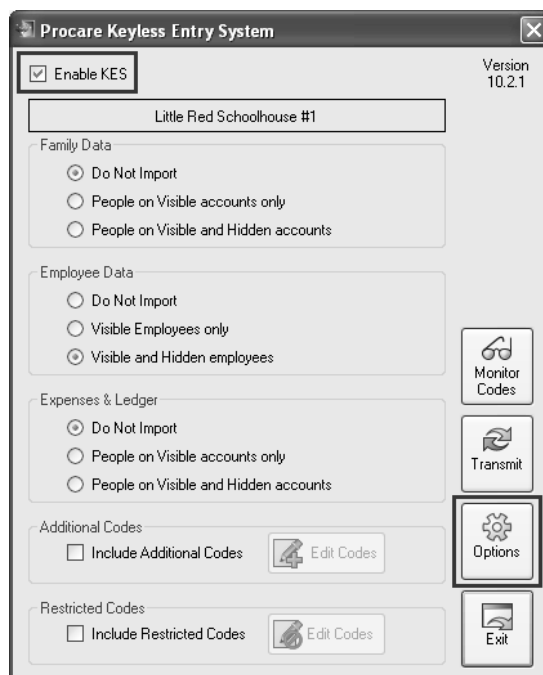

b. **Serial Port:** Choose the ComPort used to connect the KES hardware to your computer. In most cases the connection is made to a USB Port that will still be identified as COM1, or COM2, etc.

c. **Code Entry Delay:** This will reset the keypad to accept a new code, if someone begins to enter a code then walks away. Choose the number of seconds to wait before reset occurs.

d. **Guest Door Bell:** The keypad has a *Guest Door Bell* button a person may push to alert you they need help getting into the building. This may be a person without a code, someone who forgot their code, etc. You may turn the guest bell on (select *Working*) or off (select *Turned Off*).

e. **Announcement Bell:** The announcement bell may be set to ring after a person successfully enters their code so you know someone is entering the building. Choose the length of delay (1 second means wait 1 second after the code is entered before sounding the bell) or choose to turn it off.


f. **Ring Bell if User Enters Incorrect Code:** Choose the number of attempts a person may make before the bell rings.

g. **Door Controller – Wait For (delay):** Choose how long to wait after a correct code is entered for the door to buzz open. The farther the keypad is from the door the longer the "Wait For" setting should be.

h. **Door Controller – Unlock Door For (duration):** Choose how long the door should continue to buzz, allowing entry. Make it long enough so people have time to open the door, but short enough that others behind them cannot slip in without entering their own code.

4. Click *Save* > *Exit* to leave the *Options* screen. Click *Exit* once more. You may be asked if you want to save. If so answer *Yes*.

5. At your *Procare Home* screen click *Logout*. Then *Login* again. This will enable the *KES Code* option, allowing you to assign codes for people to enter the building.

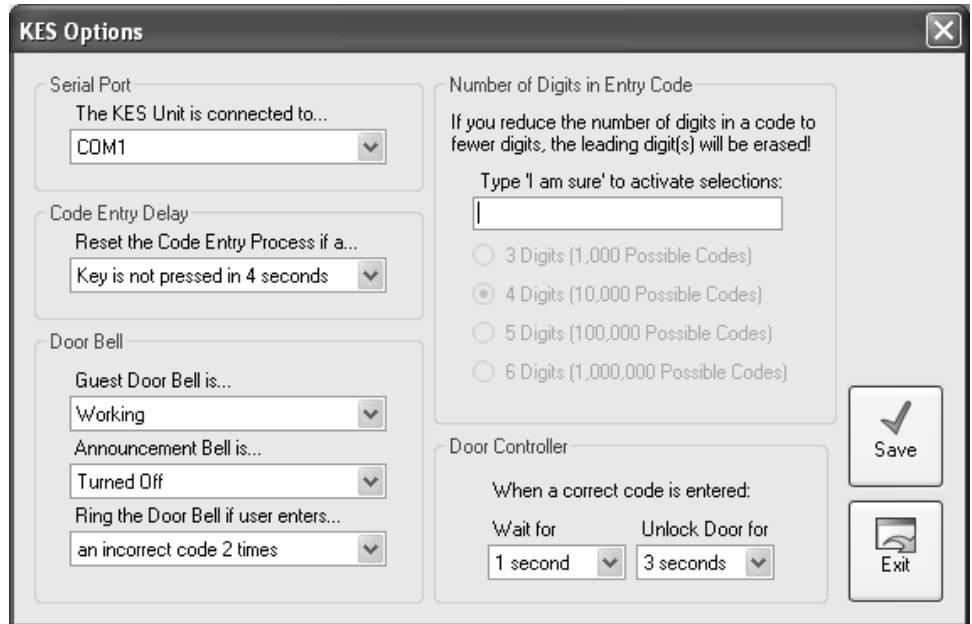

## Assign Codes to People in Procare

You'll go to the *Person Information* screen for each person in Procare who will need a code to enter the building. This may include parents and other authorized pick up persons, as well as Procare Users and employees, and perhaps certain vendors such as those involved in maintenance, yard work or janitorial services. Later, you'll also have the option to include *Additional Codes* for persons not entered in Procare.

- Getting to the *Person Information* screen varies depending on where that person is entered in Procare. For this example we'll assume the person is set up as an authorized pick up for a child. Begin by looking up a family.
- Select a child in the family then click the *Information & Relationships* icon to display pick up people for that child.



3. Dbl-click the name of a pick up person to open their *Person Information* screen.
4. On the *Person Information* screen the new *KES Code* box will appear on the right hand side just below *Gender*. Enter a code this person will use to enter the building. This could be the last four digits of their cell phone or Social Security number. It must be something unique to them.

Note: Remember the number of digits you enter should correspond to the number selected when you first enabled the Keyless Entry software. It is not advisable to change the number of digits after you have begun entering codes.

The screenshot shows a form with the following elements: a 'Gender' dropdown menu set to 'Female', a 'KES Code' text box containing '1234', a 'Photo Saved On' date field showing '12/18/2009', and a 'Remove Photo' button with a trash icon next to a portrait photo of a woman.

5. Click *Save > Exit*. Continue assigning codes to other related people in this family. Then move to the next family, etc. You'll also assign codes to anyone else in Procure, like employees, etc. who need access to the building.

## Using the Keyless Entry Software

Now that each person in Procure has been assigned a code you may want to enter additional codes (for people not in Procure) then transmit codes to the keypad. Once the codes are transmitted people may begin using the keypad. You may also monitor the codes used to enter the building.

## Getting There

From the *Procure Home* screen go to *Utilities > Procure Extras > Keyless Entry System*.

## Transmit Codes

When you transmit, the codes are sent to and stored on the keypad. Once the codes are transmitted people may begin using the keypad to enter the building. Any time you add new codes be sure to transmit again, in order to activate those codes.

1. Choose what to transmit:
  - a. **Import Codes from Procure** – To import family, staff, or vendor codes mark the appropriate choices under Family Data, Employee Data and Expenses & Ledger. The most common option is to include *People on Visible Accounts Only*.

The screenshot shows a 'Family Data' section with three radio button options: 'Do Not Import', 'People on Visible accounts only' (which is selected), and 'People on Visible and Hidden accounts'.

- b. **Additional Codes** – To include codes for other people (who are not entered in Procure) mark the *Include Additional Codes* checkbox. To add people to the additional codes list click *Edit Codes* and enter their information. To add new lines, for more additional codes, click *Save* or tap *Enter* (on your keyboard).

The screenshot shows an 'Additional Codes' section with a checked checkbox for 'Include Additional Codes' and an 'Edit Codes' button with a plus icon.

- c. **Restricted Codes** – To block codes you may place them on the restricted list. Mark the *Include Restricted Codes* checkbox. To add codes to the restricted list click *Edit Codes* and enter the information. To add new lines, for more restricted codes, click *Save* or tap *Enter* (on your keyboard).


The screenshot shows a 'Restricted Codes' section with a checked checkbox for 'Include Restricted Codes' and an 'Edit Codes' button with a minus icon.

Note: Other ways to block a code are to delete the code from the *Person Information* screen in Procure or to check the *Disabled* box on the *Additional Codes* screen. In order for the changes to take effect you must TRANSMIT the CODES.

- Next, click the *Transmit* button.



At the Transmit screen click *Start* to transmit codes **to** the keypad. Or, use the *Inquire* button to get information **from** the keypad including the serial number, KES name, firmware date, and number of codes stored.

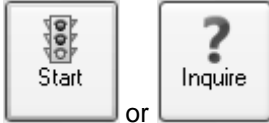

- When the transmission, or inquiry, is complete you may use the *Notepad* button to view or print the on screen information (optional).




- Click *Exit* to leave the Transmit screen.

## Monitor Codes

Use *Monitor Codes* to track each code as it is used to enter the building. The monitor feature must be running for the tracking to occur and can run in the background (just minimize the monitor screen). When you open the monitor the rest of the Keyless Entry software is automatically closed. The monitor and main Keyless Entry screens cannot be run at the same time.



**Important!** When you *Exit* the monitor screen the list of codes used is not saved. Before exiting click *Notepad* (optional) which allows you to:



- Print a list of the codes used. From the *File* menu of Notepad choose **Print**.
- Save a list of the codes used. From the *File* menu of Notepad choose **Save As**. Give the file a new name such as "Monitor-Jan-15-2011.txt" and save it to a convenient location where you'll be able to find it again.

Note: Always choose *Save As* and not just *Save*. Do not use the default file name of *monitor.txt*. This file is overwritten (erased) the next time you click the Notepad button.

###